



WE ARE FROM ŁÓDŹ
PRONOUNCE IT WOODGE
IT'S A CREATIVE AND FULL
OF ENERGY CITY IN POLAND

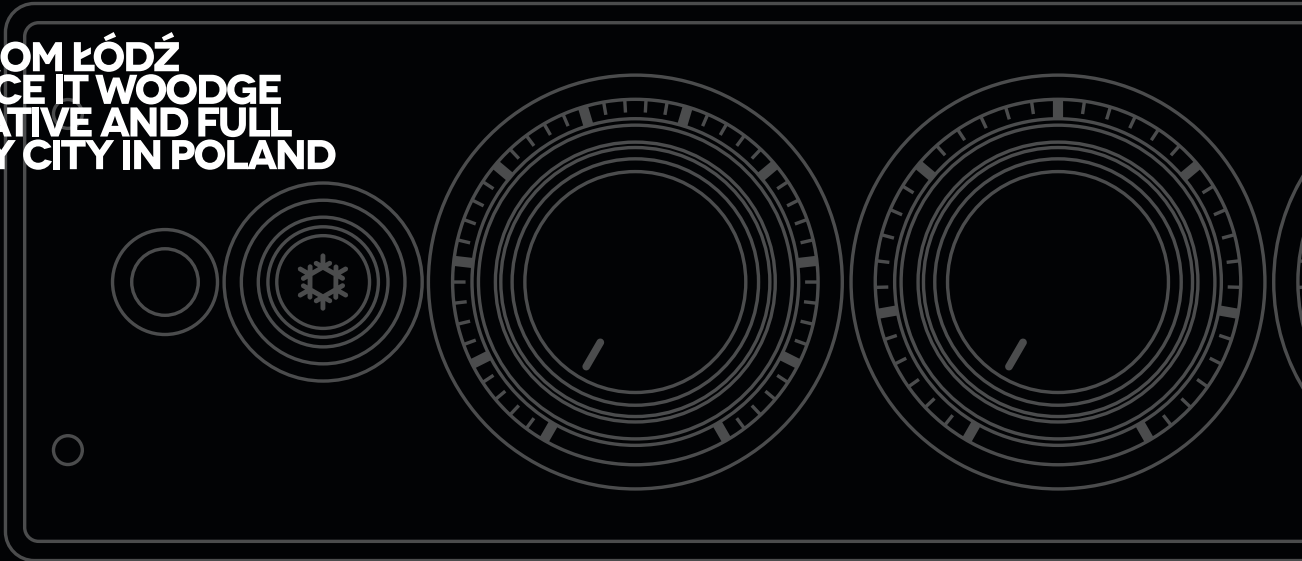


AC PANEL OEM INSTALLATION INSTRUCTION




1. Open the package with your new panel.
2. Remove the AC panel.
3. Remove the removal tools from the bottom of the packaging.

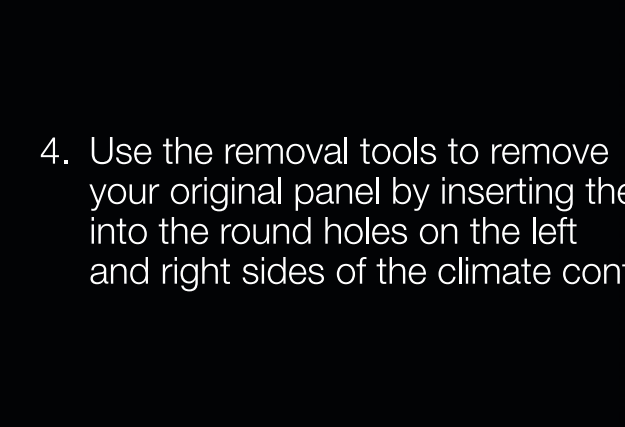


4. Use the removal tools to remove your original panel by inserting them into the round holes on the left and right sides of the climate control unit.

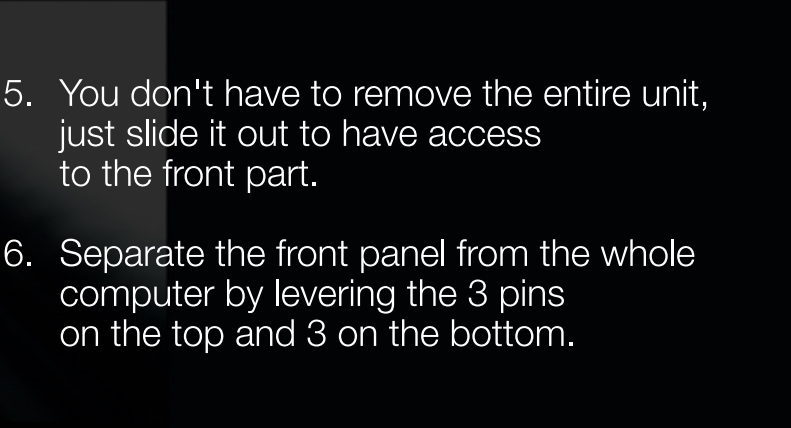

5. You don't have to remove the entire unit, just slide it out to have access to the front part.
6. Separate the front panel from the whole computer by levering the 3 pins on the top and 3 on the bottom.

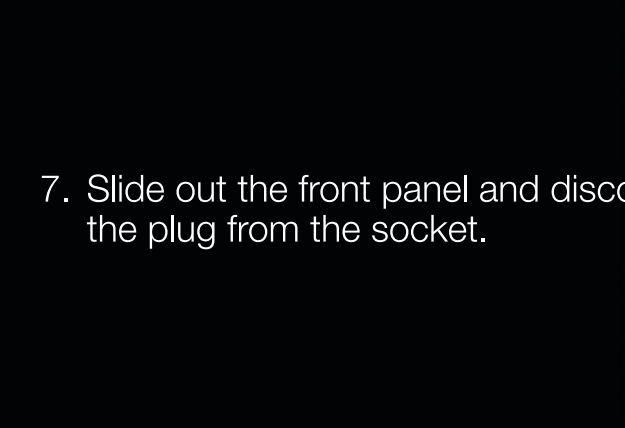

7. Slide out the front panel and disconnect the plug from the socket.

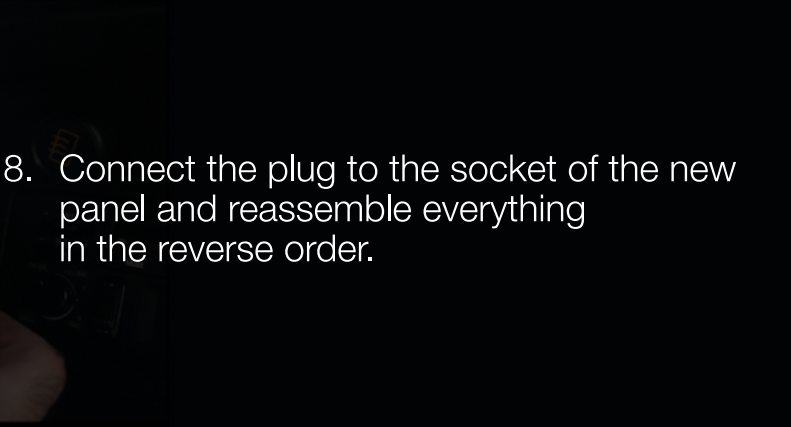

8. Connect the plug to the socket of the new panel and reassemble everything in the reverse order.



Scan the QR code.
The tutorials are available on the YouTube.



Scan the QR code.
Product on the Carbone site.

Carbone

WWW.CARBONE.PL
#CARBONELIVERIES